
## EDEN EXPRESSIONS ANTIQUE COLLECTION Luxury Vinyl Planks

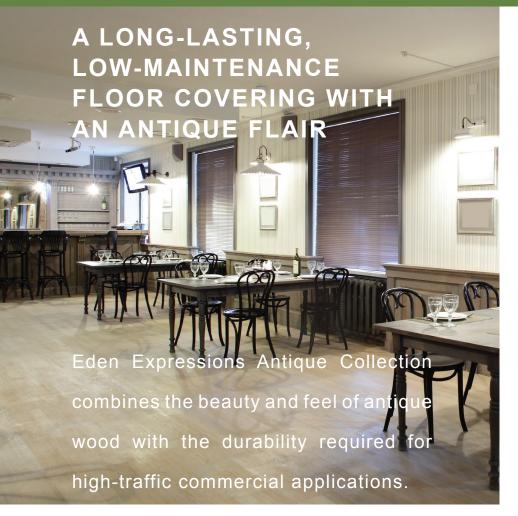


### **KEY BENEFITS & FEATURES:**

- · Heat-treated construction creates excellent dimensional stability
- Superior resistance to high traffic with a registered-embossed\*, 40 mil ceramic-bead wear layer surface
- Easy to maintain with no special waxes, sealers, dressings or other finishes required to maintain its appearance, reducing labor and chemical costs
- Elimination of sealers and finishes reduces exposure to VOCs as chemicals dry
- · Custom options available to meet your individual design needs



Planks are 7 in. x 48 in. and available in eight antique wood patterns

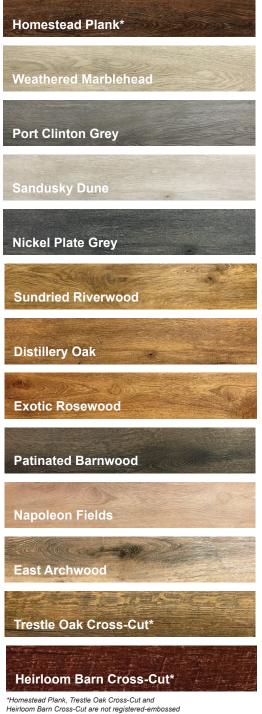

1320 East Archwood Ave • P.O. Box 7038 • Akron, OH 44306 330-773-7651 • 800-321-2381 • info@mussonrubber.com • www.mussonrubber.com



# SPECIFICATIONS

#### Suggested Uses

Beauty Salons, Conference Rooms, Corporate Lunchrooms, General Office. Hospitals, Libraries, Pharmacies, Retail/Department Stores, Resorts, Restaurants, Spas and Supermarkets

Overall Thickness	3.175mm • 0.125"
Wear Layer Thickness	1.0 mm • 40mil
I for the state of the	

#### Limited Warrantv Full Commercial Warranty

21 years

Summary of Warranty \*For a copy of the full warranty please ask for a warranty sheet

Eden Expressions planks must be professionally installed to validate the warranty.

R.C. Musson warrants Antique style first quality planks against wear for a period of 16 years. This warranty applies only to material that is properly installed and maintained, while being used as intended and recommended. If the defect is covered by this warranty and is reported to R.C. Musson within the Warranty period, Musson will supply new material of same or similar grade to repair or replace the defective material.

#### Wear

Defined as complete removal of wear layer, pattern and color due to wear from normal traffic and maintenance. If the wear occurs within 16 years from date of purchase, Musson will provide replacement materials or repair, of only the effected area.

#### Manufacturing Defects

Musson warrants style Antique first quality plank materials are free from manufacturing defects and will replace defective floor covering and reasonable installation costs for a period of up to one [1] year from date of purchase. Musson will not pay labor costs to repair or replace materials that defects were apparent before or at the time of installation.

#### Other Limitations

- This warranty is non-transferable
- Manufacturing defect must be reported within 3 months from date of purchase.
- This Warranty covers only properly installed & maintained floors
- Musson excluded and will not pay for any consequential or incidental expenses.
- Musson reserves the right of final judgment and may refuse claims in certain instances.

#### Packing

Plank 7" x 48": 15 planks/ctn. Sq. Ft. per carton: Overall Thickness 0.125" (3.175mm) Wear Layer Thickness 40 mil (1.0mm) Weight: 34.81 lbs./carton

#### **Technical Specs**

Stability (EN 986) Pass Abrasion Resistance (EN 660) Excellent (<0.15g/1000 cycles) Static Load Limit (ASTM F-970 Modified) 2000 psi Sound Insulation (DINS 52210): 4 dB Slip Resistance (ASTM D 2047) Pass (Exceeds ADA Recommendations) Stain and Chemical Resistance (ASTM F 925) Pass Resistance to Light (F 1515) Pass Residual Indentation (F 1914) Pass (<8%)

#### **Flammability Rating**

Radiant Panel Test (ASTM E 648)	Class 1
Smoke Density (ASTM E 662)	Pass (<450 sdi)
Heat Stability (ASTM F 1514)	Pass
HUD/FHA Requirements	Exceeds

## **EDEN EXPRESSIONS ANTIQUE COLLECTION**

Luxury Vinyl Planks

#### Installation

Surface Preparation: Subfloor (wood or concrete) must be structurally sound, clean, smooth, dry free from dust, dirt, wax, grease, and/or any other foreign material that would interfere with a good bond. DO NOT USE adhesives where moisture is present in concrete or wood-type subfloors. Moisture may retard or prevent adhesive from setting

Primer: Latex primer acts like a sealer but allows adhesion of the planks to the concrete floors. It also helps preventing moisture from getting between the planks and subfloor.

Tools required: Utility knife, carpenter square, chalk, string, pencil and rolling pin.

#### Installation Guide

Antique style planks and adhesive must be conditioned at room temperature, minimum 65°F for 24 hours before and 24 hours after installation. Spread adhesive with a 1/16" X 1/16" X 1/16" square-notch trowel. Apply adhesive to subfloor according to the instructions on the container. Spread adhesives to small areas to avoid letting the adhesive dry too much before you have finished laying your plank. For planks use the wet set installation instructions. Roll each section immediately upon completing with a 100 pound three-section roller. Re-roll the entire floor after one or two hours. If you do not have access to a roller, then use a rolling pin and your body weight. Do not wash or treat the floor for a minimum of 48 hours after installation.

#### Maintenance

We recommend using a non-rising cleaner that leaves no film and suggest that you vacuum, sweep or dust mop twice per week. Hi-traffic areas might require more frequent cleaning.

Wipe up food and other spills immediately using recommended cleaner and a soft cloth. You should NEVER USE ABRASIVE CLEANERS, POWDERS, OIL CLEANERS, WAXES OR DISH DETERGENT. These will scratch the surface or leave a film.

When using a vacuum, if possible turn off the beater and use a hose or wand with an upholstery attachment. Vacuum wheel may also be a source for indenting and scuffing, check the wheels for embedded grit.

To remove scuff marks you can use a soft cloth to rub it out. If they difficult to remove try using a product named "Oops Painter Wipes". Rinse the area well afterwards with clean warm water and allow to dry. Please note that these procedures may help remove stains from vinyl floors, but cannot guarantee complete removal. Burns, holes or "permanent" stains may require a replacement "patch of that section of the floor.

To remove damaged planks you can use a hair dryer, which heats up the adhesive allowing the plank to be picked up. When the plank is up, use a wide blade putty knife and pull it out, then put the new plank down once the surface has been prepared. You should NEVER USE A HEAT GUN as this emits too much heat and will damage the planks.

#### IMPORTANT NOTICE

35 sq. ft.

Sample swatches have been cut from an overall design, decoration & shade may vary. The random nature of wood and other natural materials from which our patterns are designed means that significant color and design variation is normal and enhances the extraordinary look of Antique planks.



1320 East Archwood Ave • P.O. Box 7038 Akron, OH 44306 330-773-7651 • 800-321-2381 info@mussonrubber.com • www.mussonrubber.com

RCMIS EDENANT748 122816