


VINYL LINK MATS


INSTALLATION INSTRUCTIONS

IMPORTANT – The mat is rolled upside down for shipping

TO INSTALL PROPERLY:

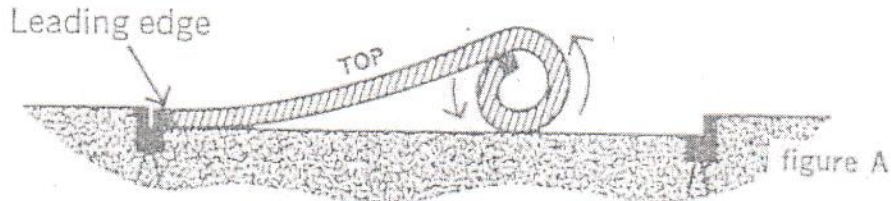


1. Unroll as shown in Figure A.

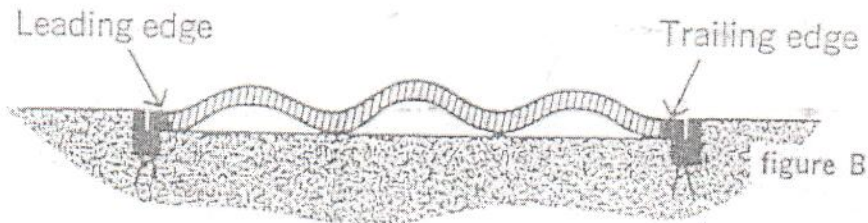

2. Place leading edge and trailing edge in recess (or in position if in a confined area) as shown in Figure B.

MAT WILL APPEAR TO BE TOO LONG AND WILL WRINKLE AS SHOWN IN FIGURE B

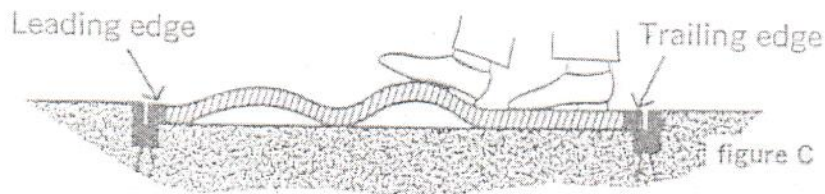

3. Slowly walk from trailing edge to leading edge to walk the wrinkles out (Figure C).

IF MAT HAS BEVELED EDGES, FOLLOW THE SAME PROCEDURE.

Push in nosing at the center of leading and trailing edges.

Pull out all four corners at leading and trailing edges.

Walk out all over mat to attain a rectangular shape.